

To upgrade to the latest 2.05 version on your TRS5000 please follow these steps. **This upgrade is very important. If you fail to install this update some TPX1 chips may not clone on your machine.**

1. Go to the download section in our website [www.jmausa.com](http://www.jmausa.com) and download the TRS5000.exe update file and save it on your desktop to your computer.
2. Once you have finished downloading this file, double click on the TRS5000 icon and go through the installation process. If you have a previous version of this software installed in your computer, windows will ask you if you wish to Modify, Repair or Remove the previous software. **Select Repair** and continue with the installation process. Windows will tell you this software is not digitally signed click continue anyway and go through the installation process.
3. With your TRS5000 turned off, connect it to your computer via the USB cable. Turn your TRS5000 machine on and wait for a beep. Once you hear a beep from the TRS5000, you should hear a chime from your computer. This indicates that your computer has recognized your TRS5000 Unit.
4. Open the TRS5000 software you previously installed, by clicking on the yellow key icon on your desktop. The main program screen will appear. Click on settings on the menu to your left. A screen titled program options will appear. Click on Reload Comport List button, and select the USB port from the drop down list. Finally, press start communication. The COM icon on the bottom of the main program screen should turn green. This means your computer and your TRS5000 are in communication. Minimize the TRS5000 program.
5. Download the trs5205.bin file from our website [www.jmausa.com](http://www.jmausa.com) and save it on your desktop.
6. On the TRS5000 software program, click on Upload Program on the menu to the left. A new screen titled Upload Program to the TRS 5000 will appear. Click on file, and select the file trs5205.bin you previously downloaded and saved on your desktop. Click Upload, and the program will send this file to your TRS5000. Click exit, once the program is completely uploaded.
7. At this point, you need to restart communication from your PC to your TRS5000. To do this, click on Settings on the menu to the left, click on Stop Communications, wait for the COM icon on the bottom of the main screen to turn red. Once the icon has turned red, click on Reload Com Port List, select the USB port from the drop down menu and finally click Start Communications. After a few seconds, the COM button on the bottom of the

screen should be green, indicating there is communication between your TRS5000 and your computer. Minimize the TRS5000 software.

8. Download ENG\_TRS\_v2\_05.txt file from our website [www.jmausa.com](http://www.jmausa.com). You will see a text document appear on your screen. On the toolbar, click file and save it on your desktop.

9. Go to the TRS5000 program, select languages from the menu on your left. As before, select file and select the file ENG\_TRS.txt you previously saved on your desktop. Click upload, and wait for the program to upload the file to your TRS5000. Exit this screen as soon as the file is uploaded.

10. PLEASE NOTE THAT WHENEVER YOU STOP USING THE TRS5000 IN PC MODE, YOU MUST STOP COMMUNICATIONS BETWEEN YOUR PC AND THE TRS5000 **BEFORE YOU EXIT THE PROGRAM**. TO DO THIS GO TO SETTINGS AND STOP COMMUNICATIONS UNTIL THE COM ICON ON THE BOTTOM OF THE SCREEN IS RED. ONCE THE COM ICON IS RED YOU CAN EXIT THE TRS5000 PC PROGRAM.

11. Your TRS5000 is now upgraded with the latest 2.05 version.

If you have any difficulty upgrading your machine, please contact Mike Ripoll or Anthony El Harif at 817-385-0515.

TRS5000 UPGRADE